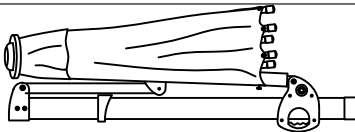









REF	NB	
<b>A</b>	<b>1</b>	
<b>B</b>	<b>1</b>	
<b>C</b>	<b>1</b>	
<b>D</b>	<b>1</b>	
<b>E</b>	<b>1</b>	
<b>F</b>	<b>1</b>	
<b>G</b>	<b>4</b>	M8*25 
<b>H</b>	<b>8</b>	 Spare wood screw. If the foot plate has no ballast, use this wood screw for fixation
<b>I</b>	<b>1</b>	