MIRADOR™ 3x3m
User Manual
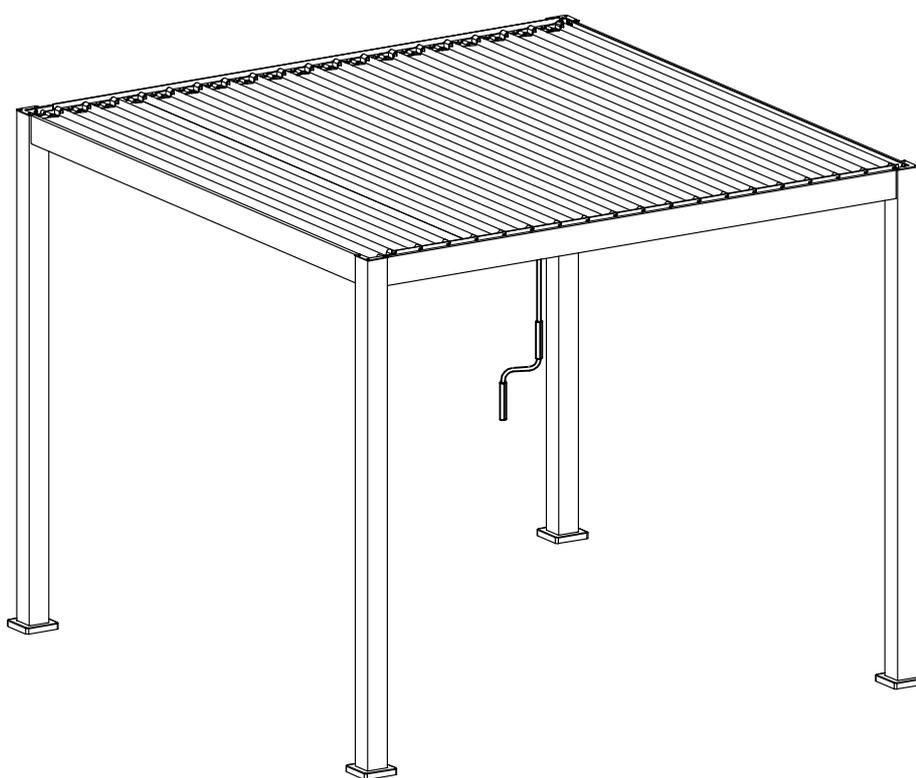
	REF	QTY	REF	QTY	REF	QTY
Carton 1/4	Ⓐ	4PCS	Ⓘ	4PCS	Ⓙ	4PCS
	Ⓚ	37PCS	Ⓛ	1PC	Ⓜ	40PCS
	Ⓝ	4PCS	Ⓞ	24PCS	Ⓟ	80PCS
	Ⓠ	80PCS	Ⓡ	12PCS	Ⓢ	42PCS
	Ⓣ	1PC	Ⓤ	1PC	Ⓥ	1PC
	Ⓦ	16PCS	Ⓧ	1PC	Ⓨ	2PCS
	User Manual	1SET				
Carton 2/4	Ⓑ1	1PC	Ⓑ2	1PC	Ⓒ	2PCS
	Ⓖ	2PCS	Ⓗ	1PC		
Carton 3/4	Ⓓ	10PCS				
Carton 4/4	Ⓓ	9PCS				
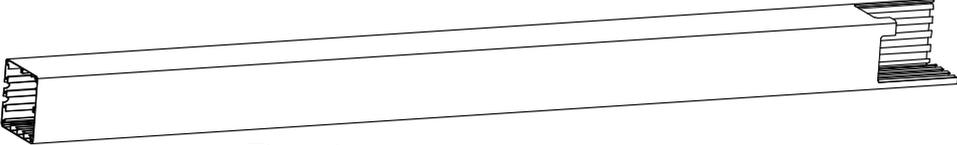
REF	PICTURE	QTY
A	Post	4PCS
B1	Beam with gear and pivot bushing	1PC
B2	Beam with pivot bushing	1PC
C	Beam	2PCS
D	Louver boards	19PCS
G	Control road	2PCS
H	Crank	1PC
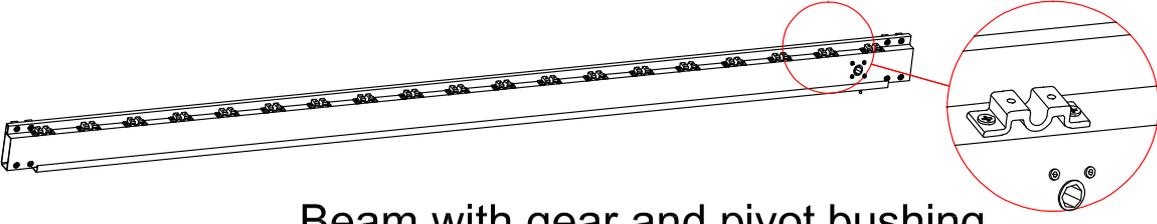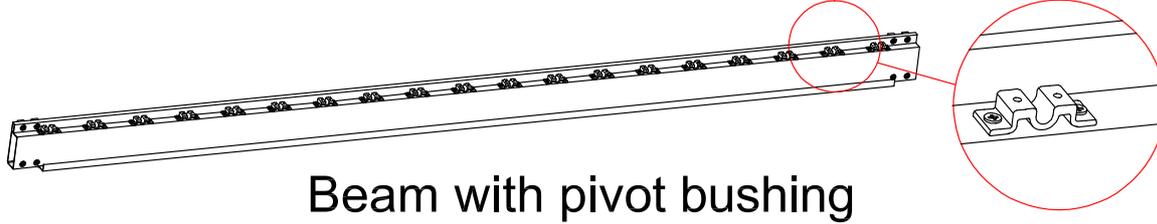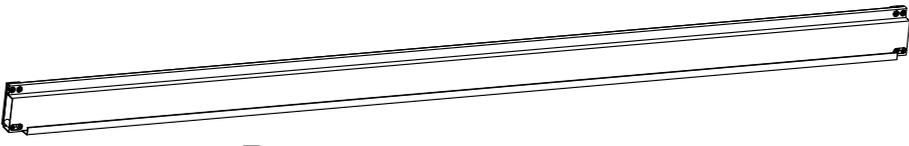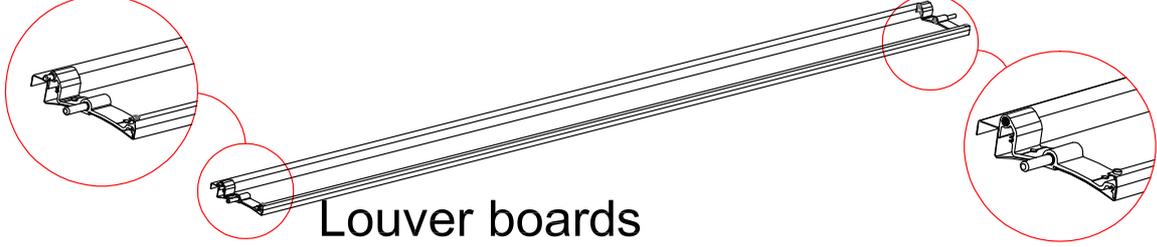
1
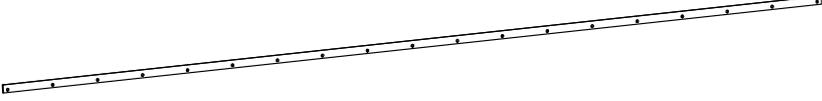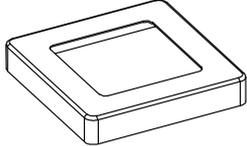
REF	PICTURE	QTY
I	Base plate cover	4PCS
J	Base Plate	4PCS
K	End baffle	37PCS
L	Rotate-driving baffle	1PC
M	Shaft press connector	40PCS
N	rectangle connector	4PCS
O	Tapping Screws ST5.65x35mm	24PCS
P	Screws M5x12mm	80PCS
Q	Tapping Screws ST4.2x18mm	80PCS
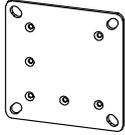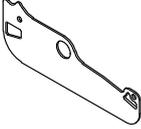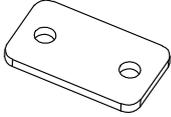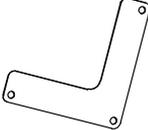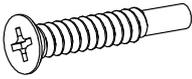
REF	PICTURE	QTY
R	Tapping Screws ST5.5x19mm	12PCS
S	Jump ring Φ1.6x28mm	42PCS
T	Spacer Φ6.4xΦ18x1.6mm	1PC
U	Furniture screws M6x65	1PC
V	Crank ring	1PC
W	Expansion Screws M8x80mm	16PCS
X	Spanner M5	1PC
Y	Spanner S6	2PCS
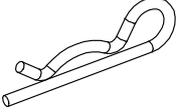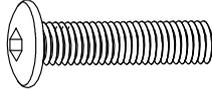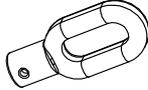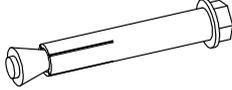
Warning

In snow season or in case of snow forecast open up your shutters in vertical position to avoid any damaging on your pergola.

What you need?
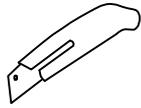
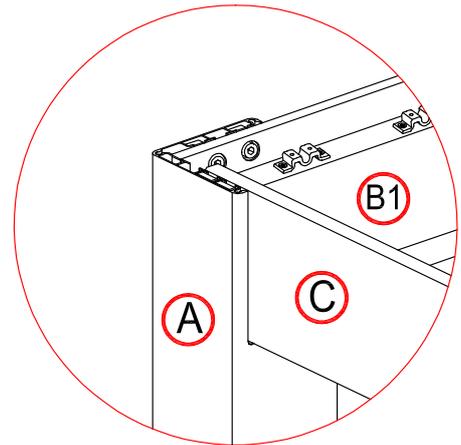|			
glove	knife	hammer	Safety hat
tapeline	electric screw driver	ladder	
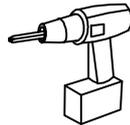
1

×4 times

2

3

A

B1

B1

A

A

B1

A

B1

A

Y

A

B1

3

4

A

B2

A

B2

A

A

B2

A

B2

A

A

B2

Y

A

B2

4

B1

C

B2

A

B2

C

A

B1

C

B2

A

B2

C

Y

A

B1

C

C

B2

A

B1

C

A

C

B1

A

C

B1

Y

6

7

B1
C
C
B2

B1
C
C

B1
C
C
B2

B1
C
V

B1
C
H

B1
C

x1 time

D

Q

L

Q

D

D

Q

K

Q

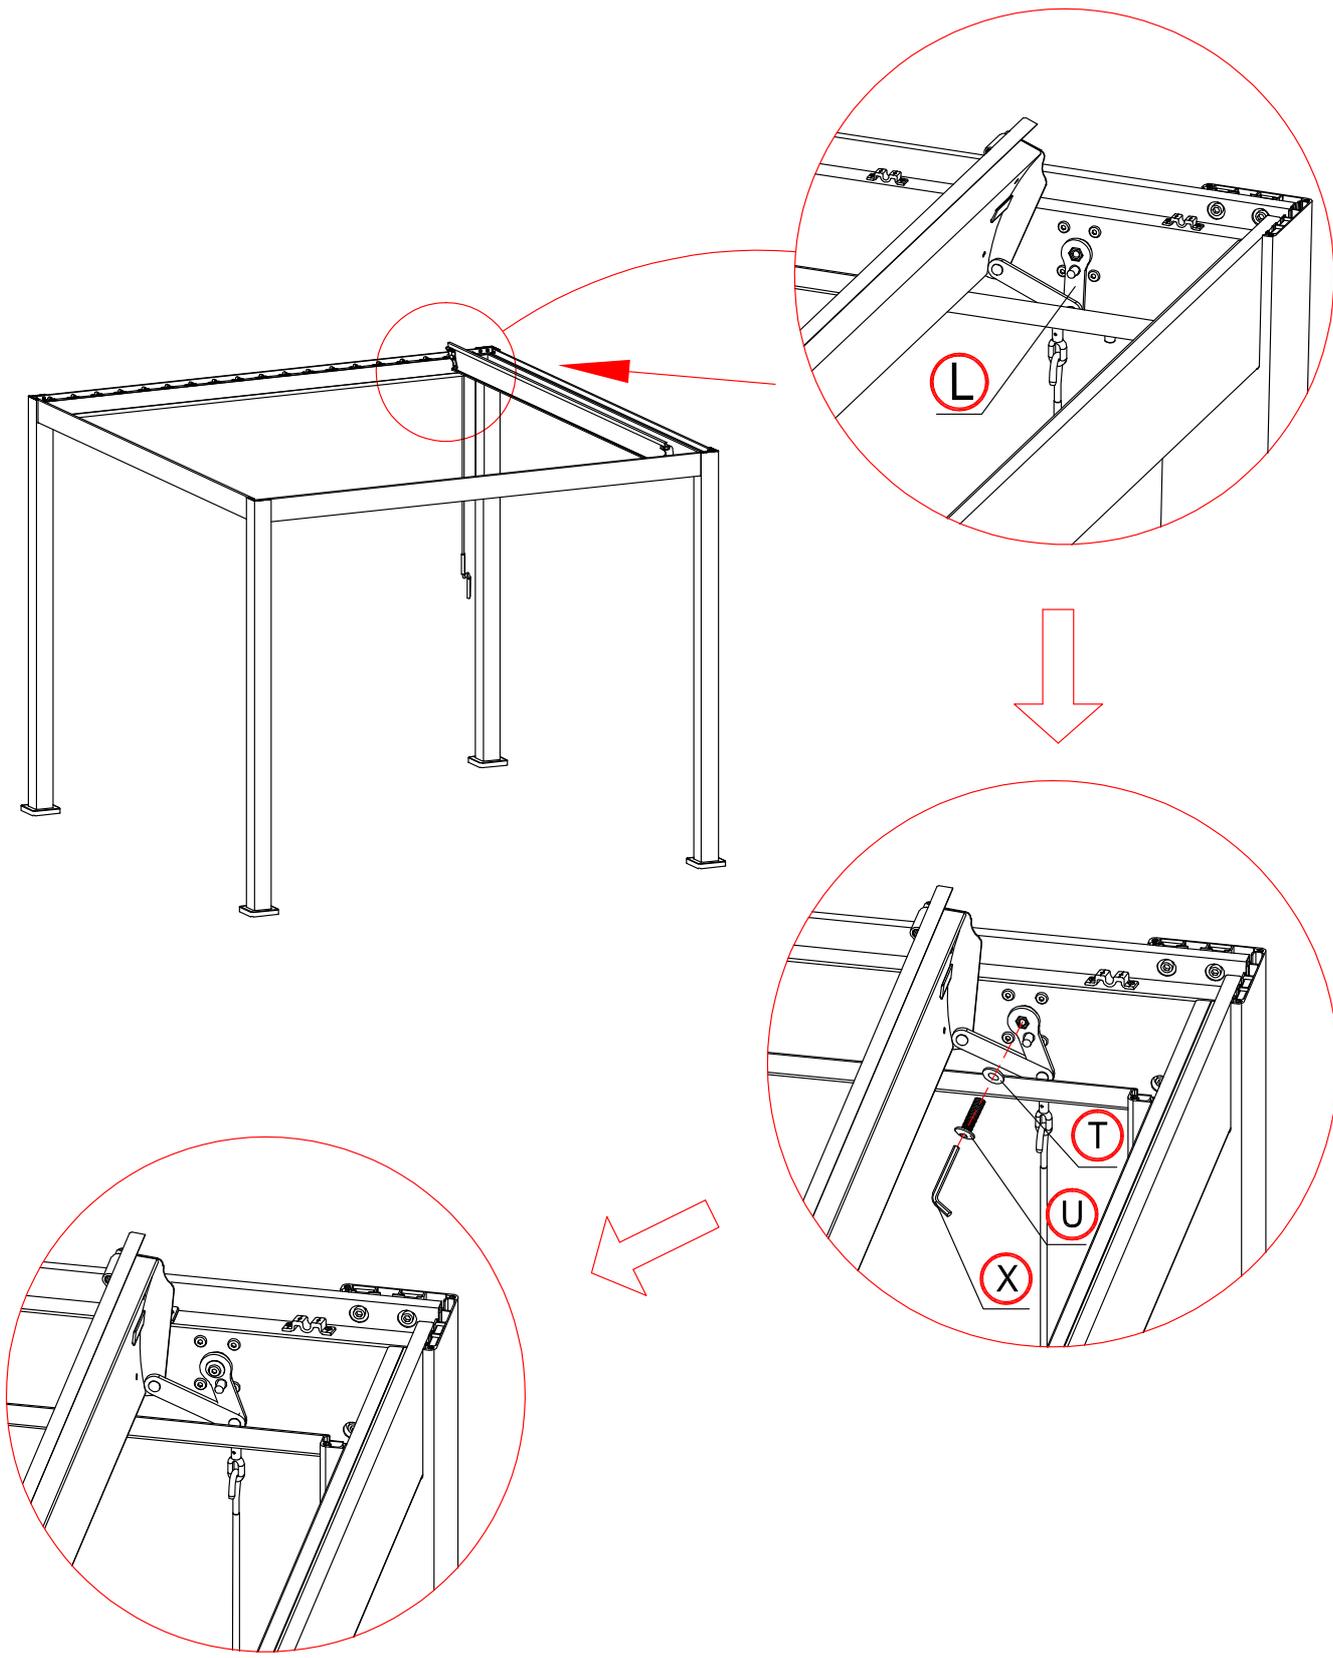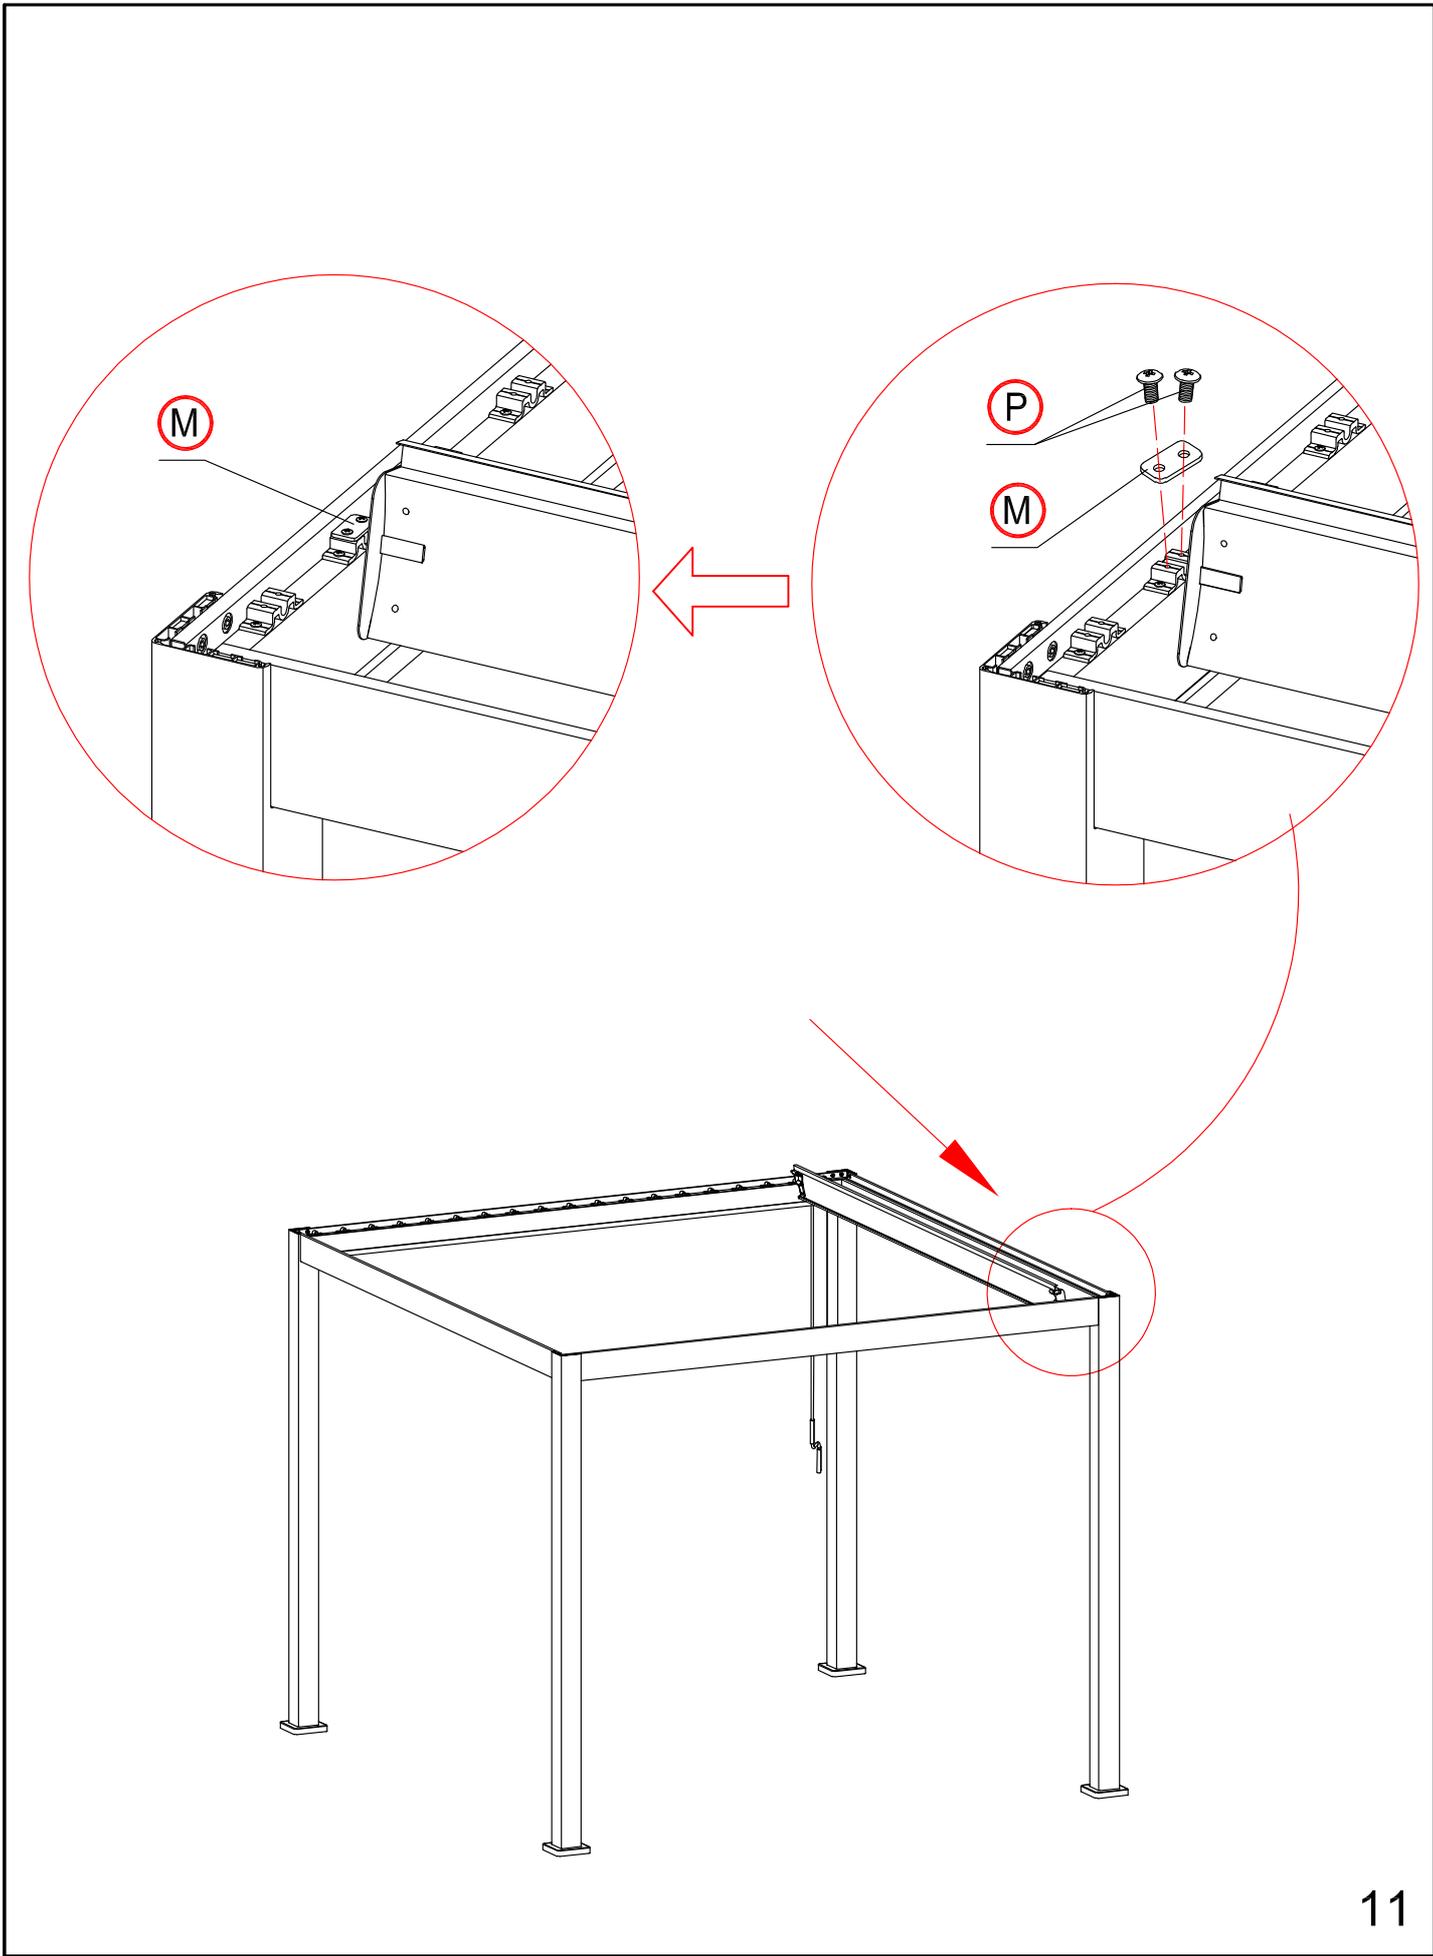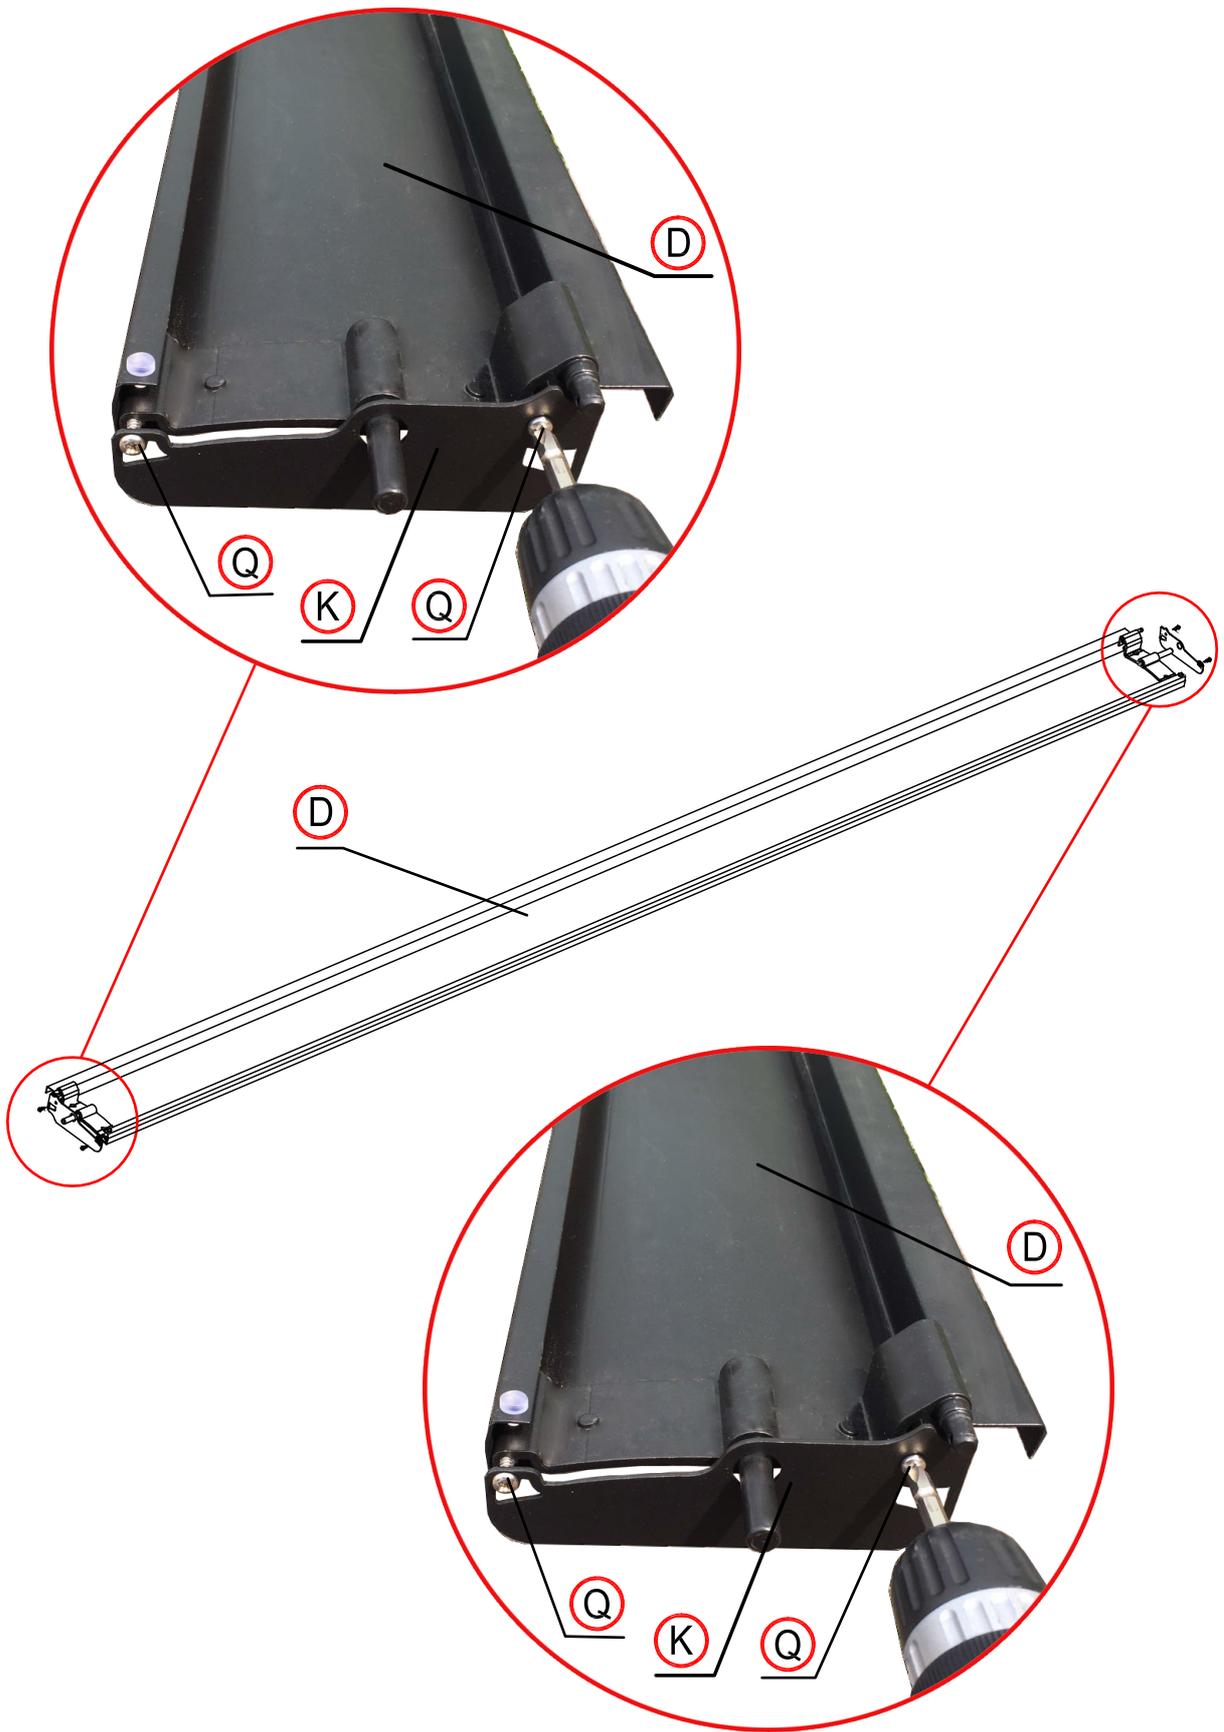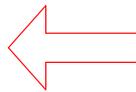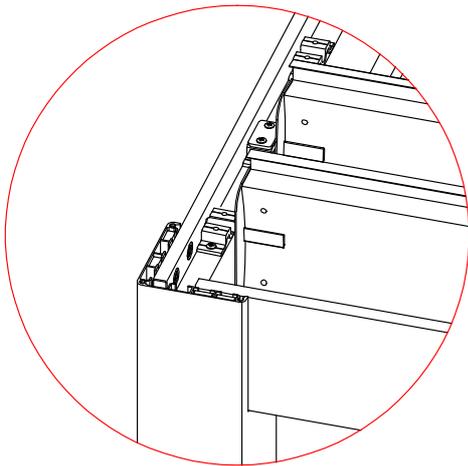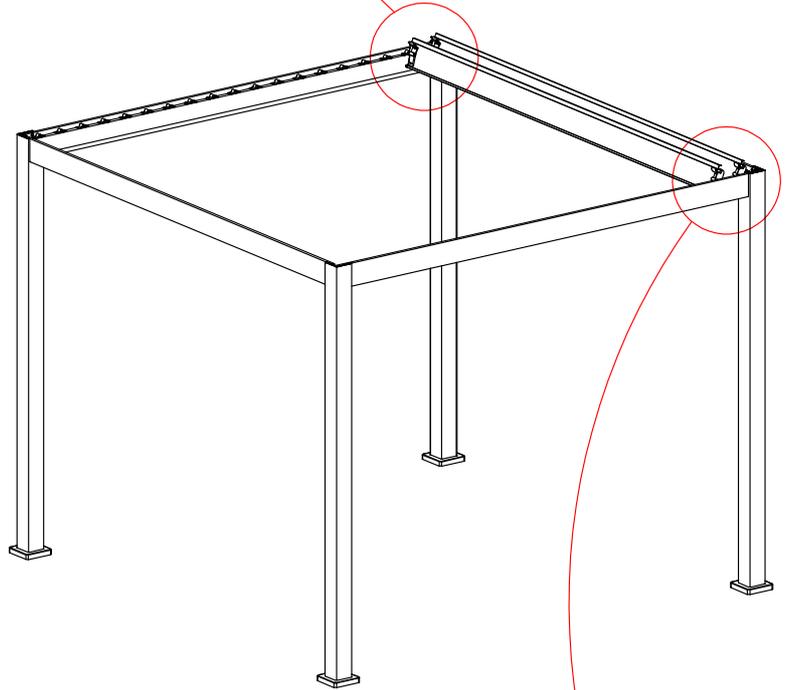8

9
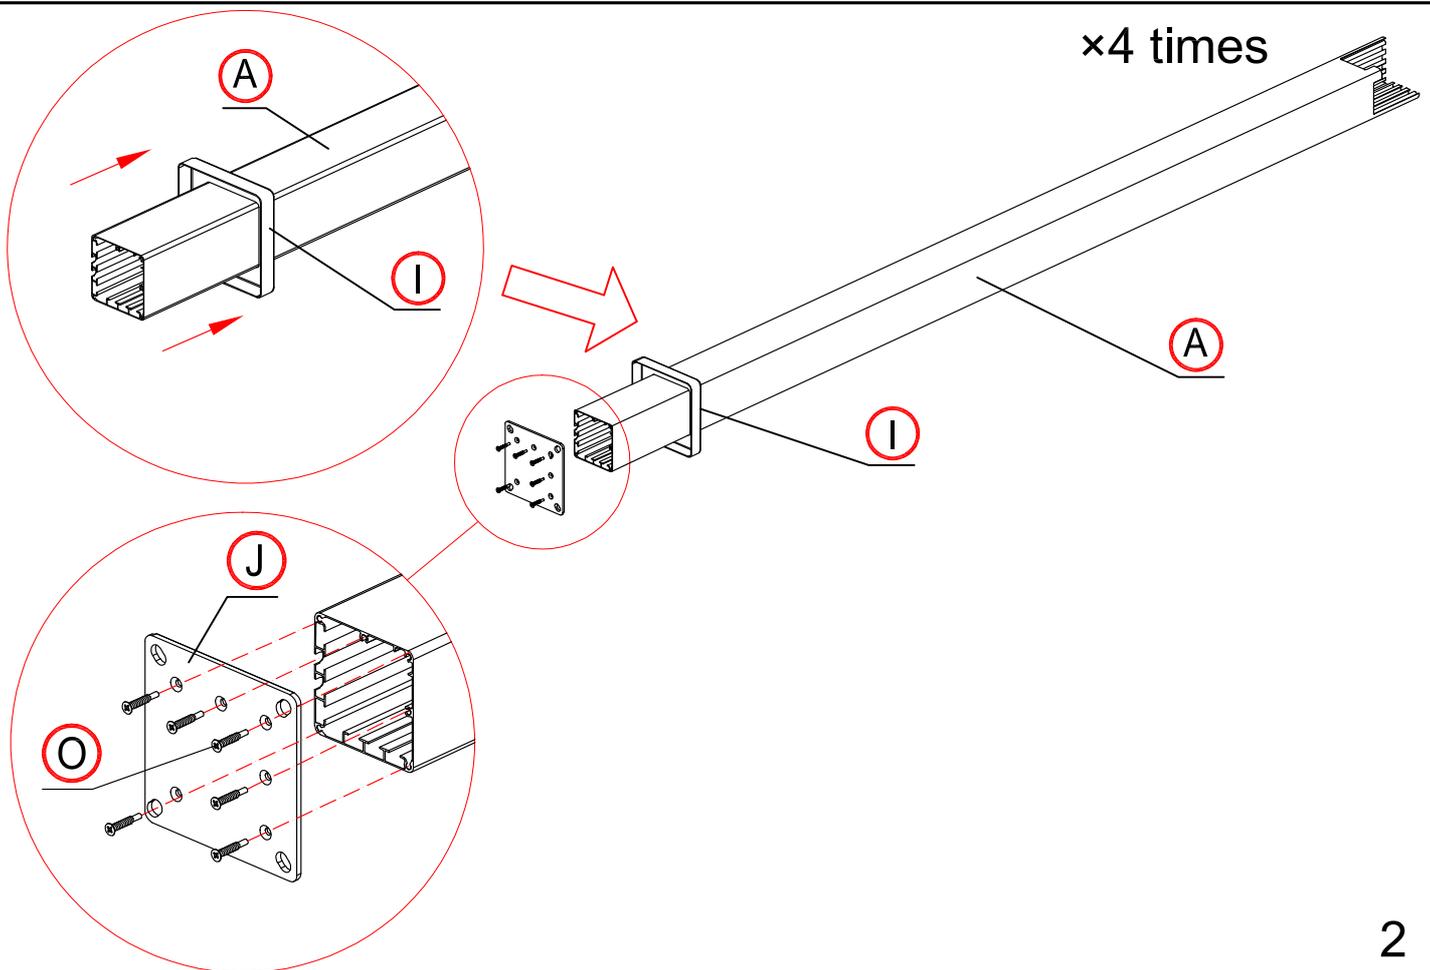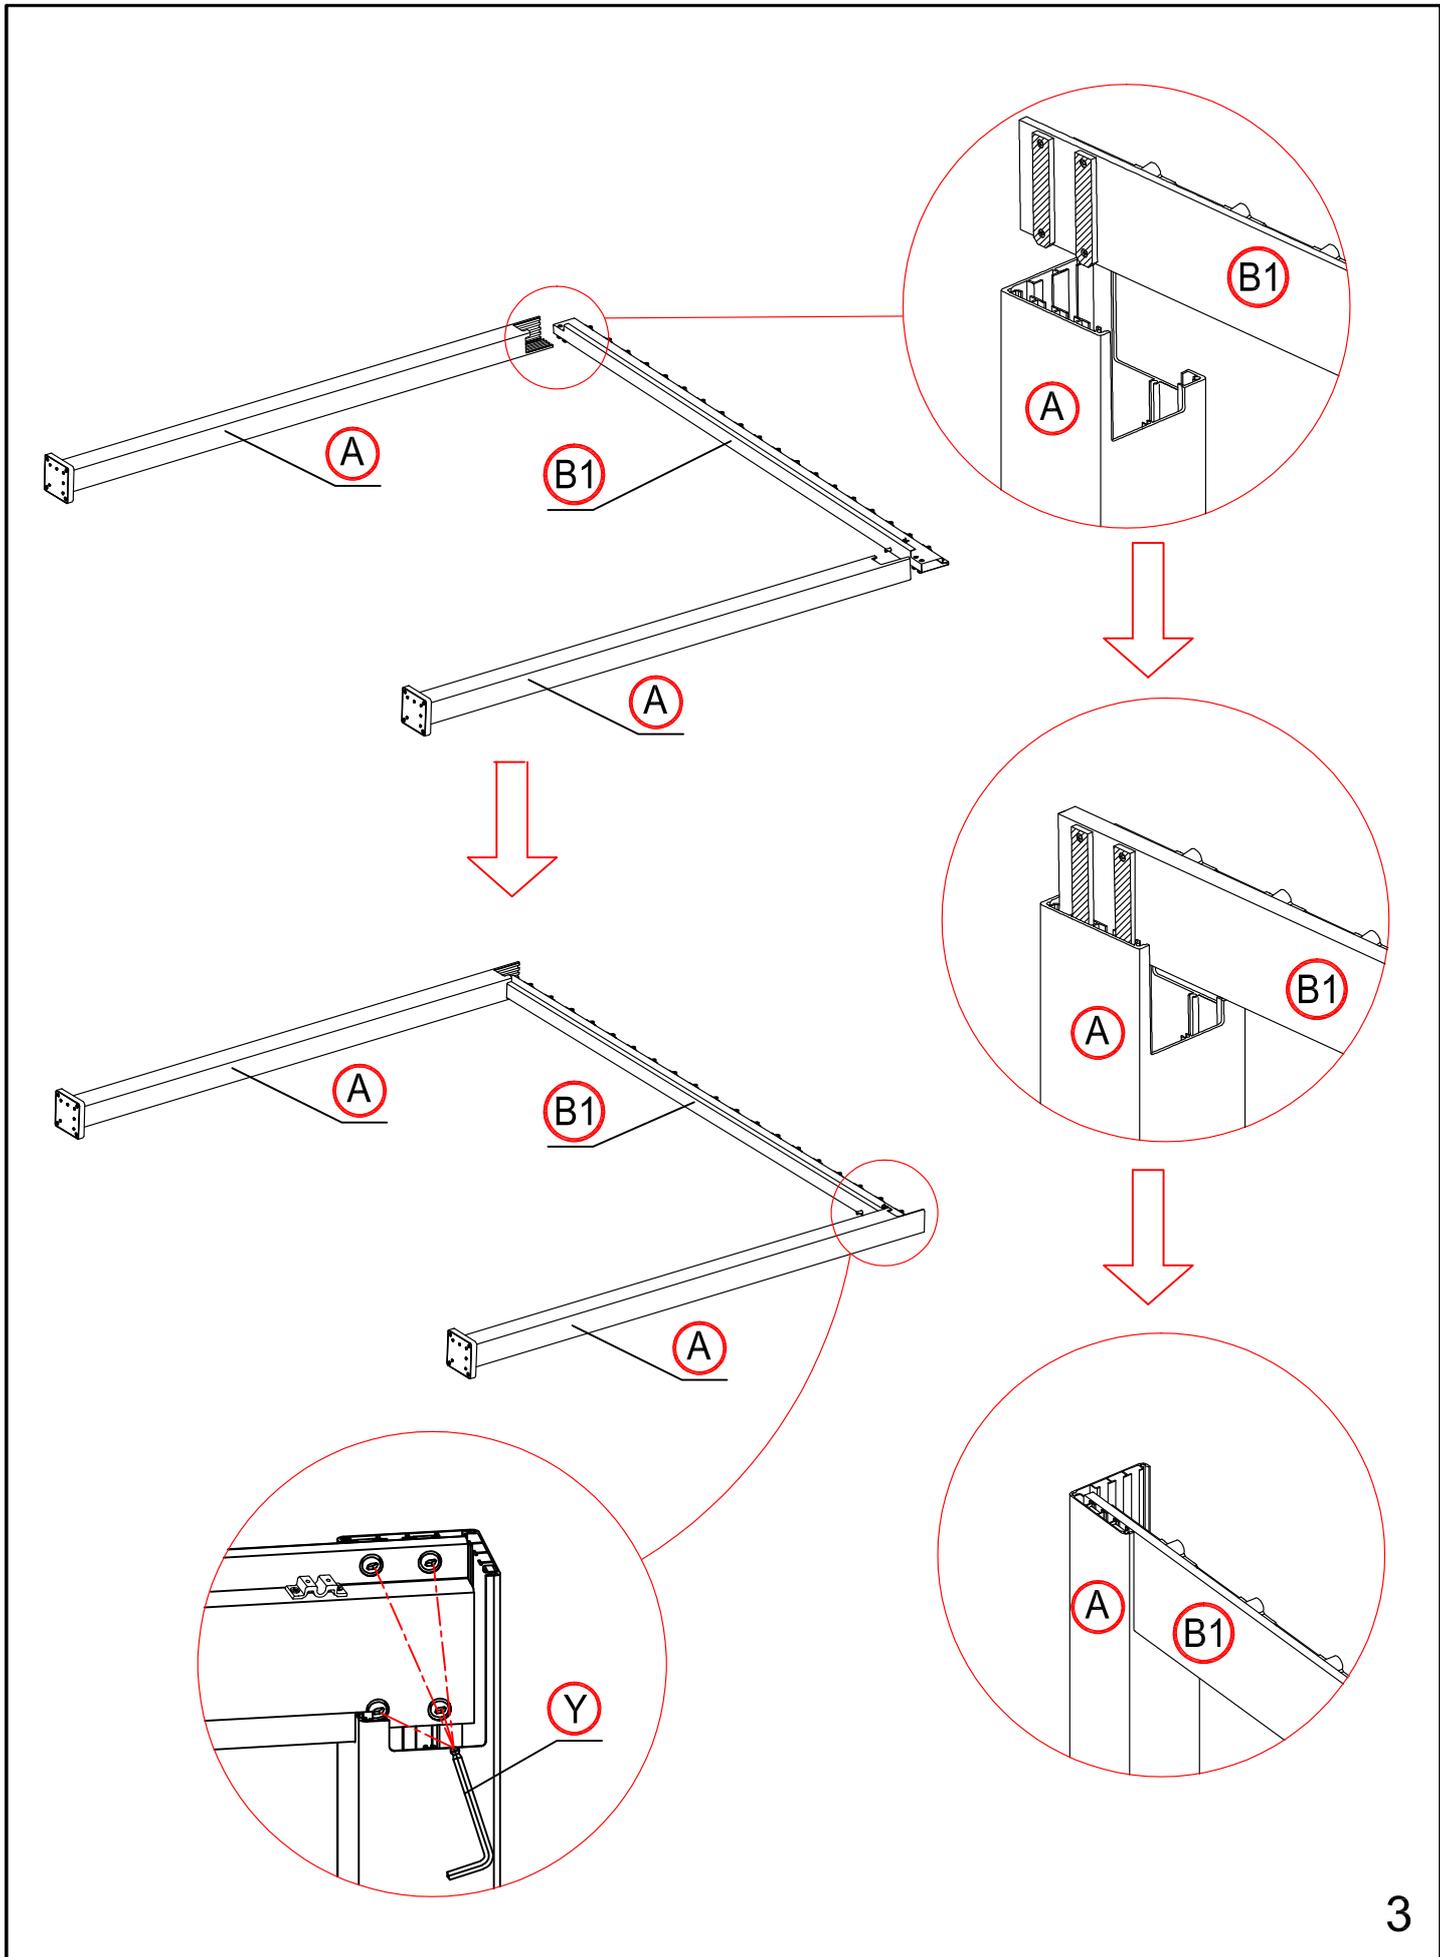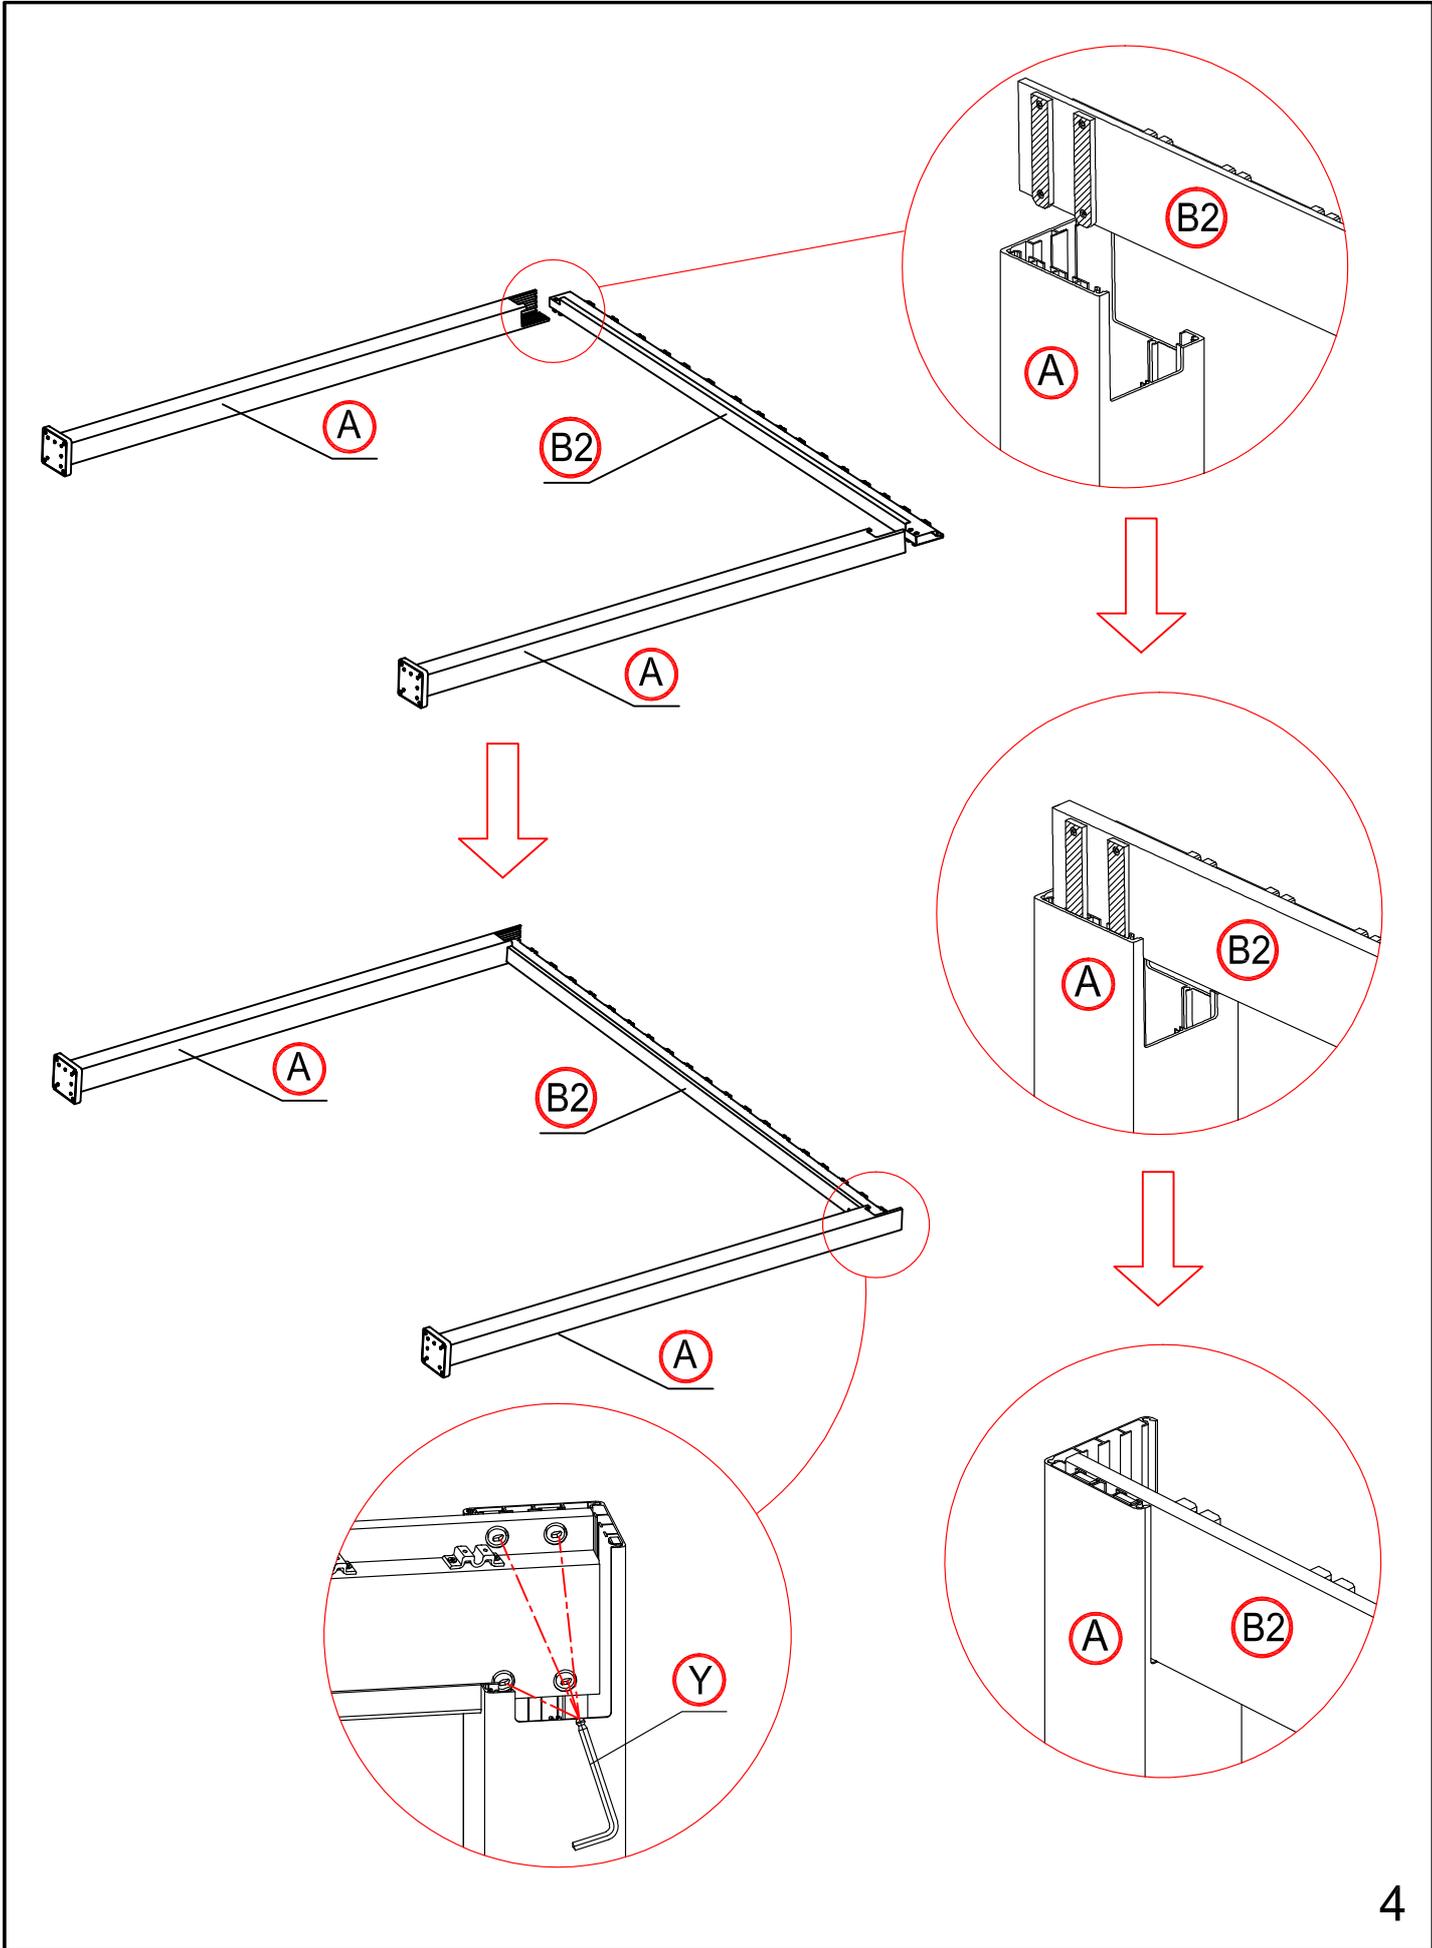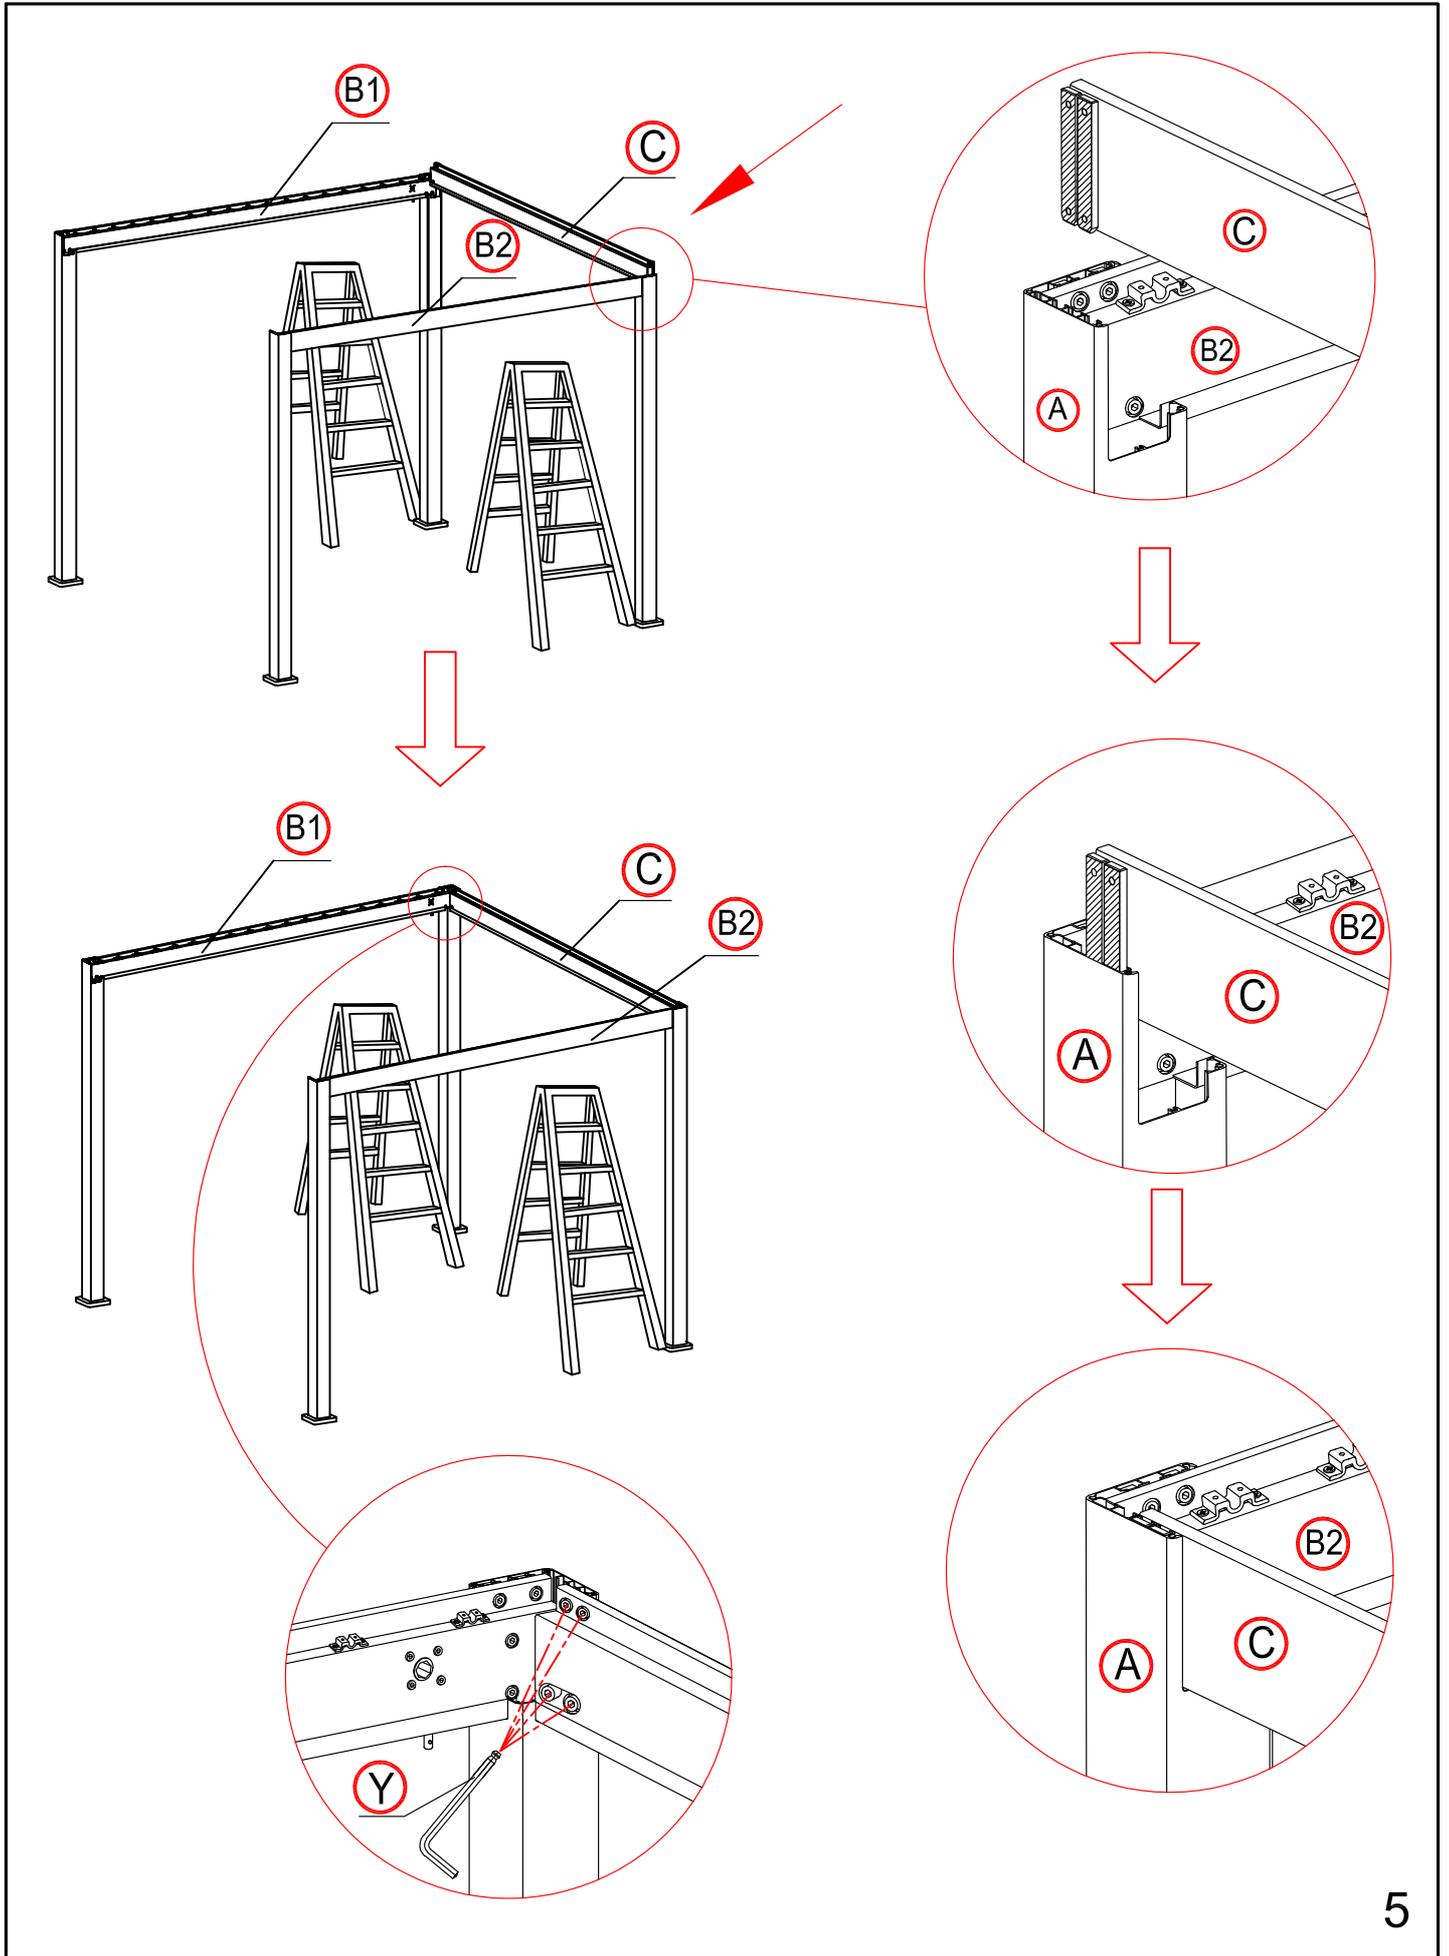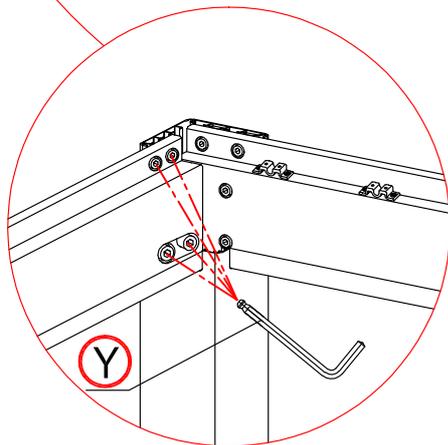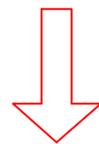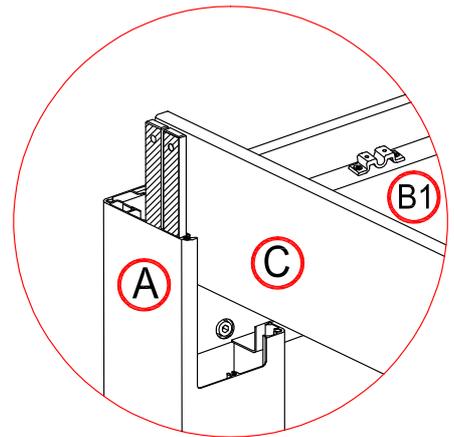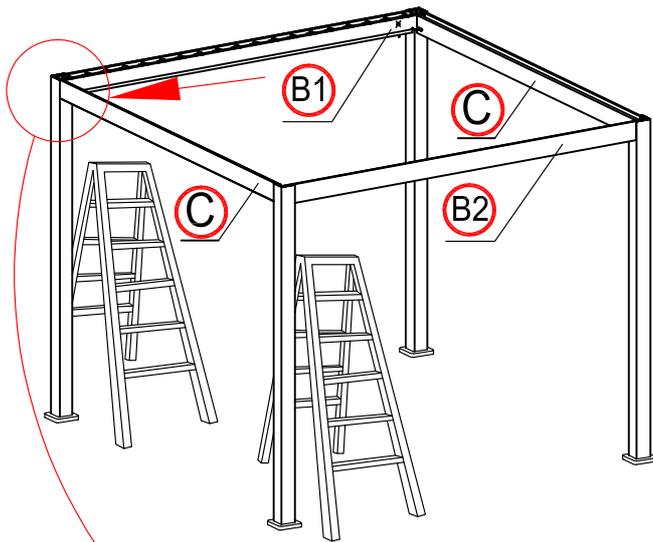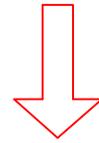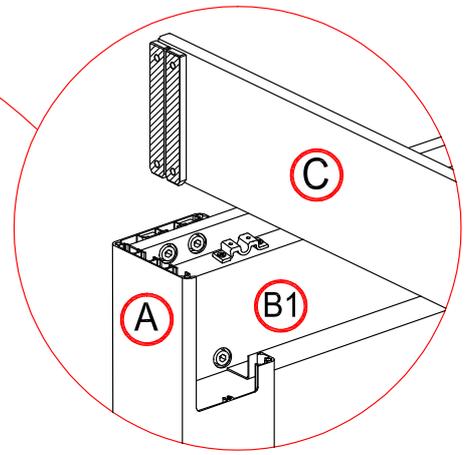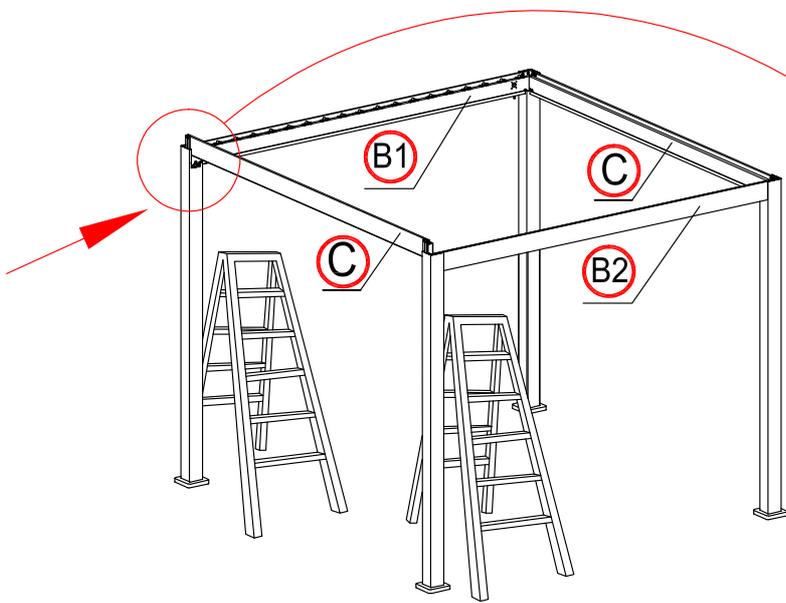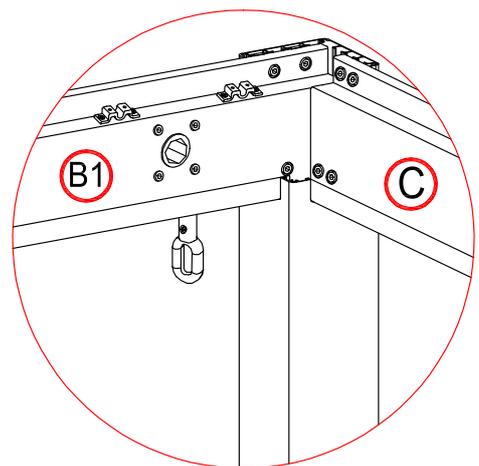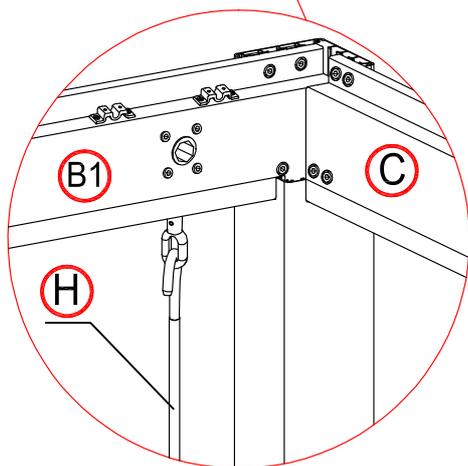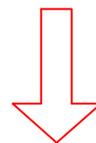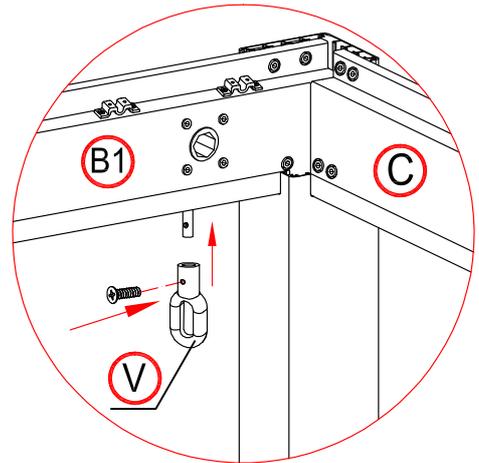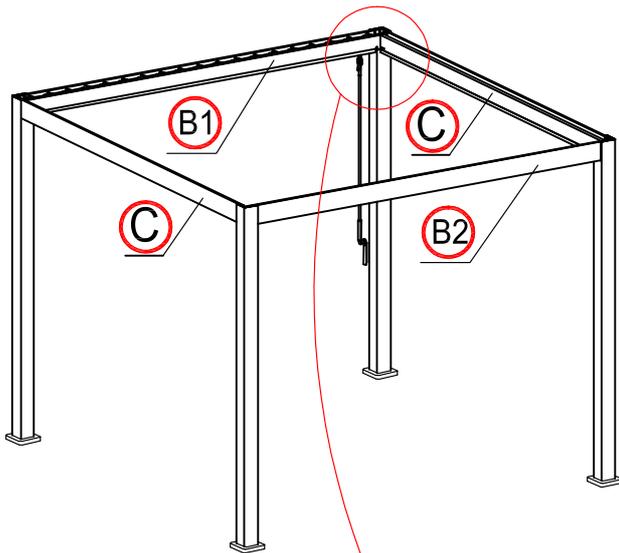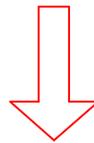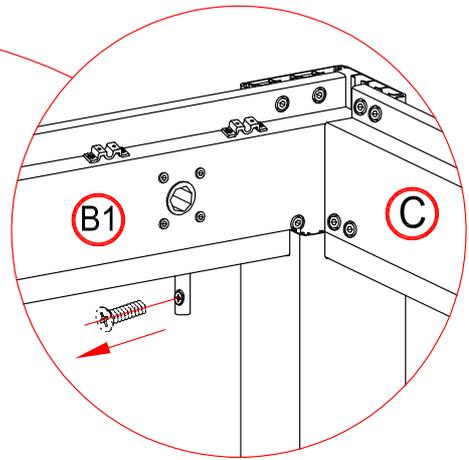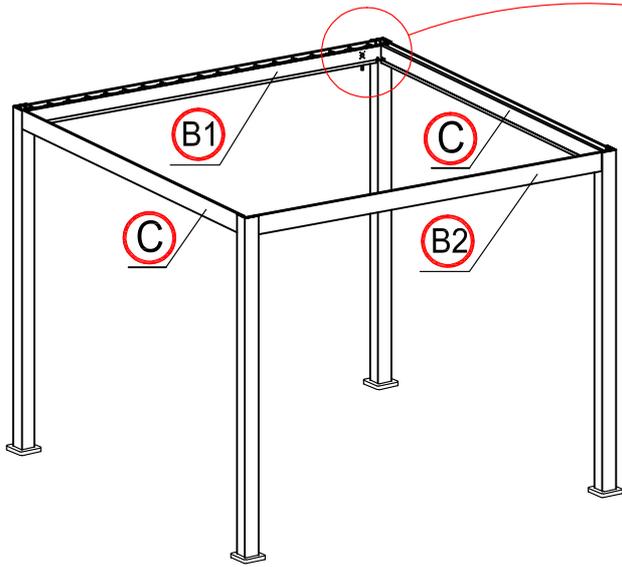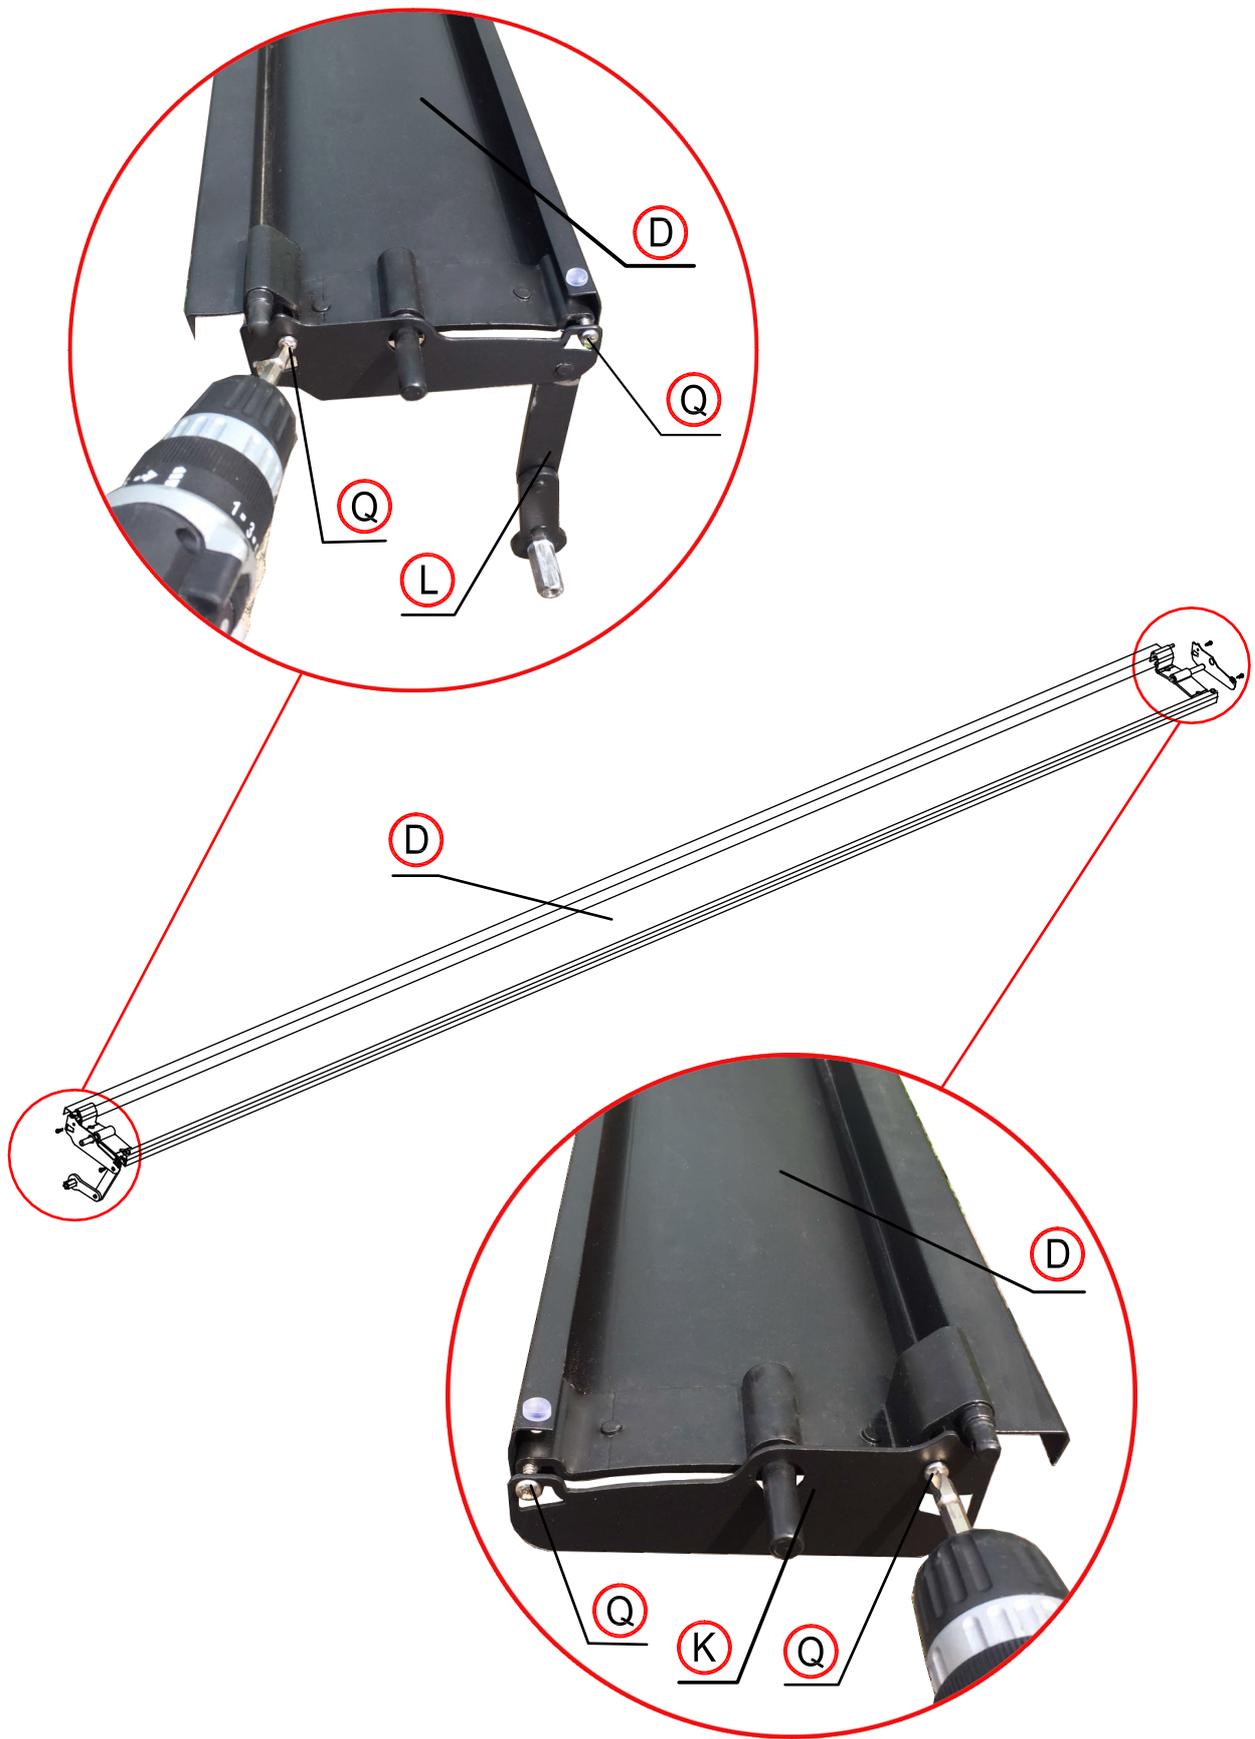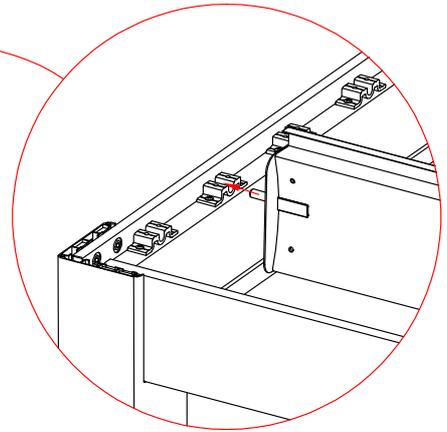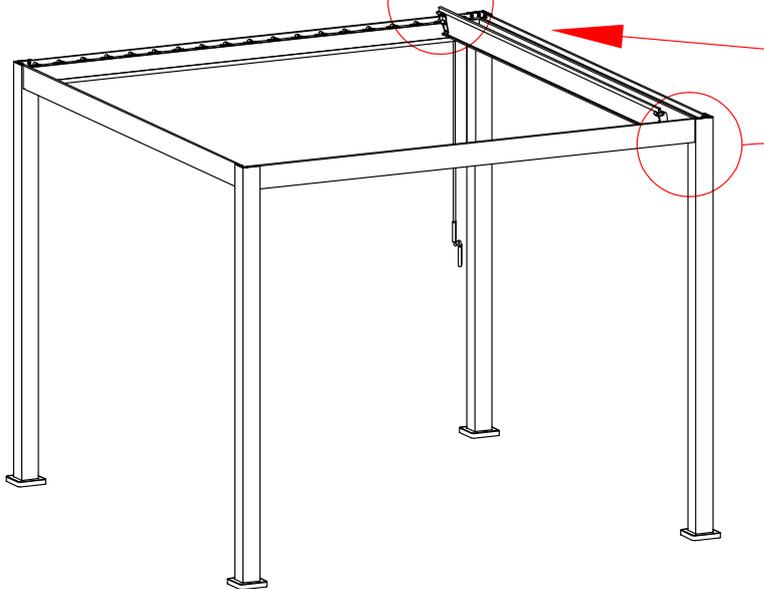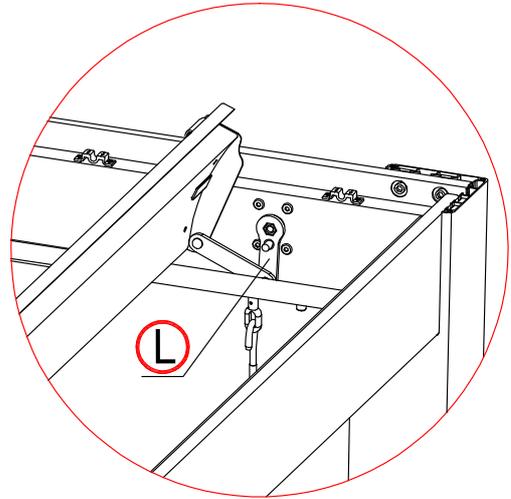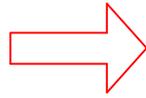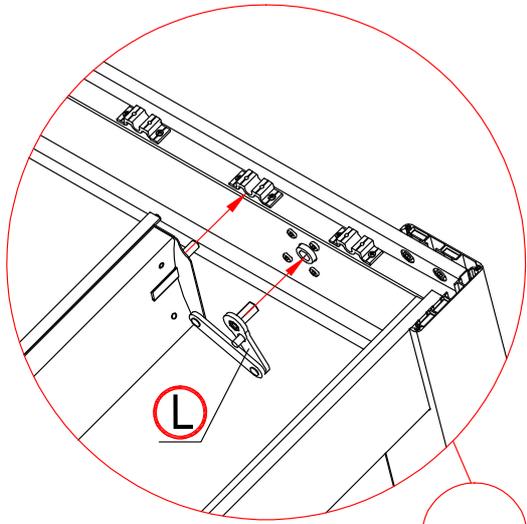
Assemble the second slice to the right.

9

10

L

T
U
X

10

M

P

M

x18 times

D

Q

K

Q

D

D

Q

K

Q

D

13

P

M

13

14
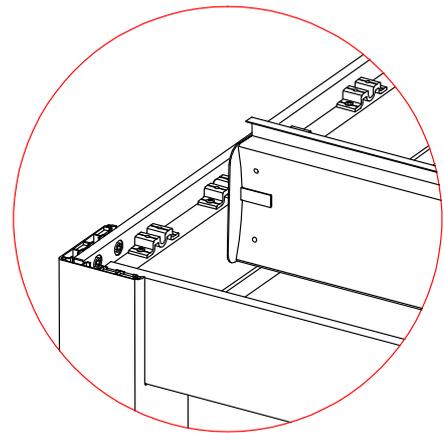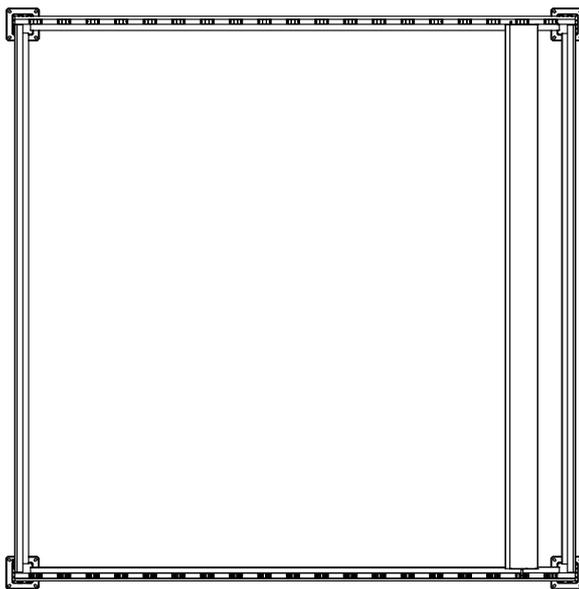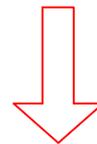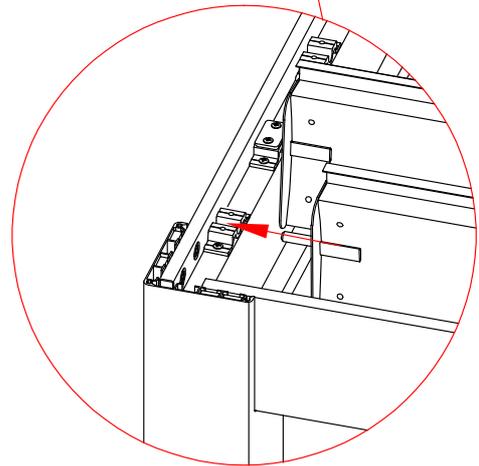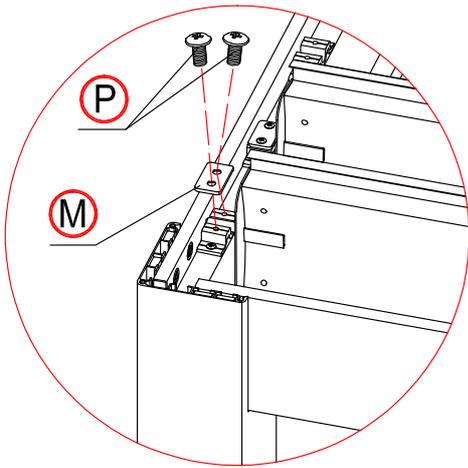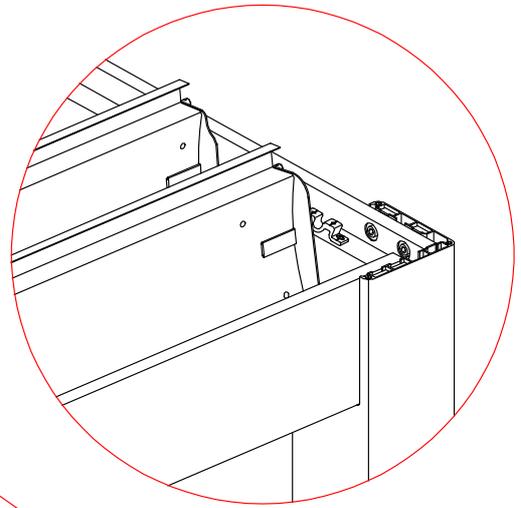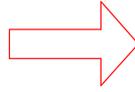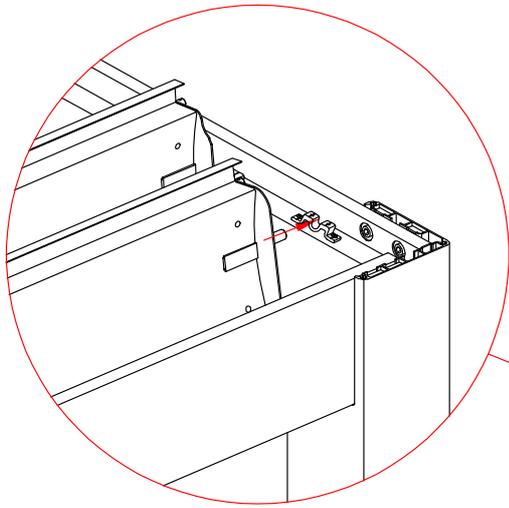
Make the shutter as vertical.

S

S

G

G

G

G

15

16

×4 times

R   N

16

×4 times

W

17

17